
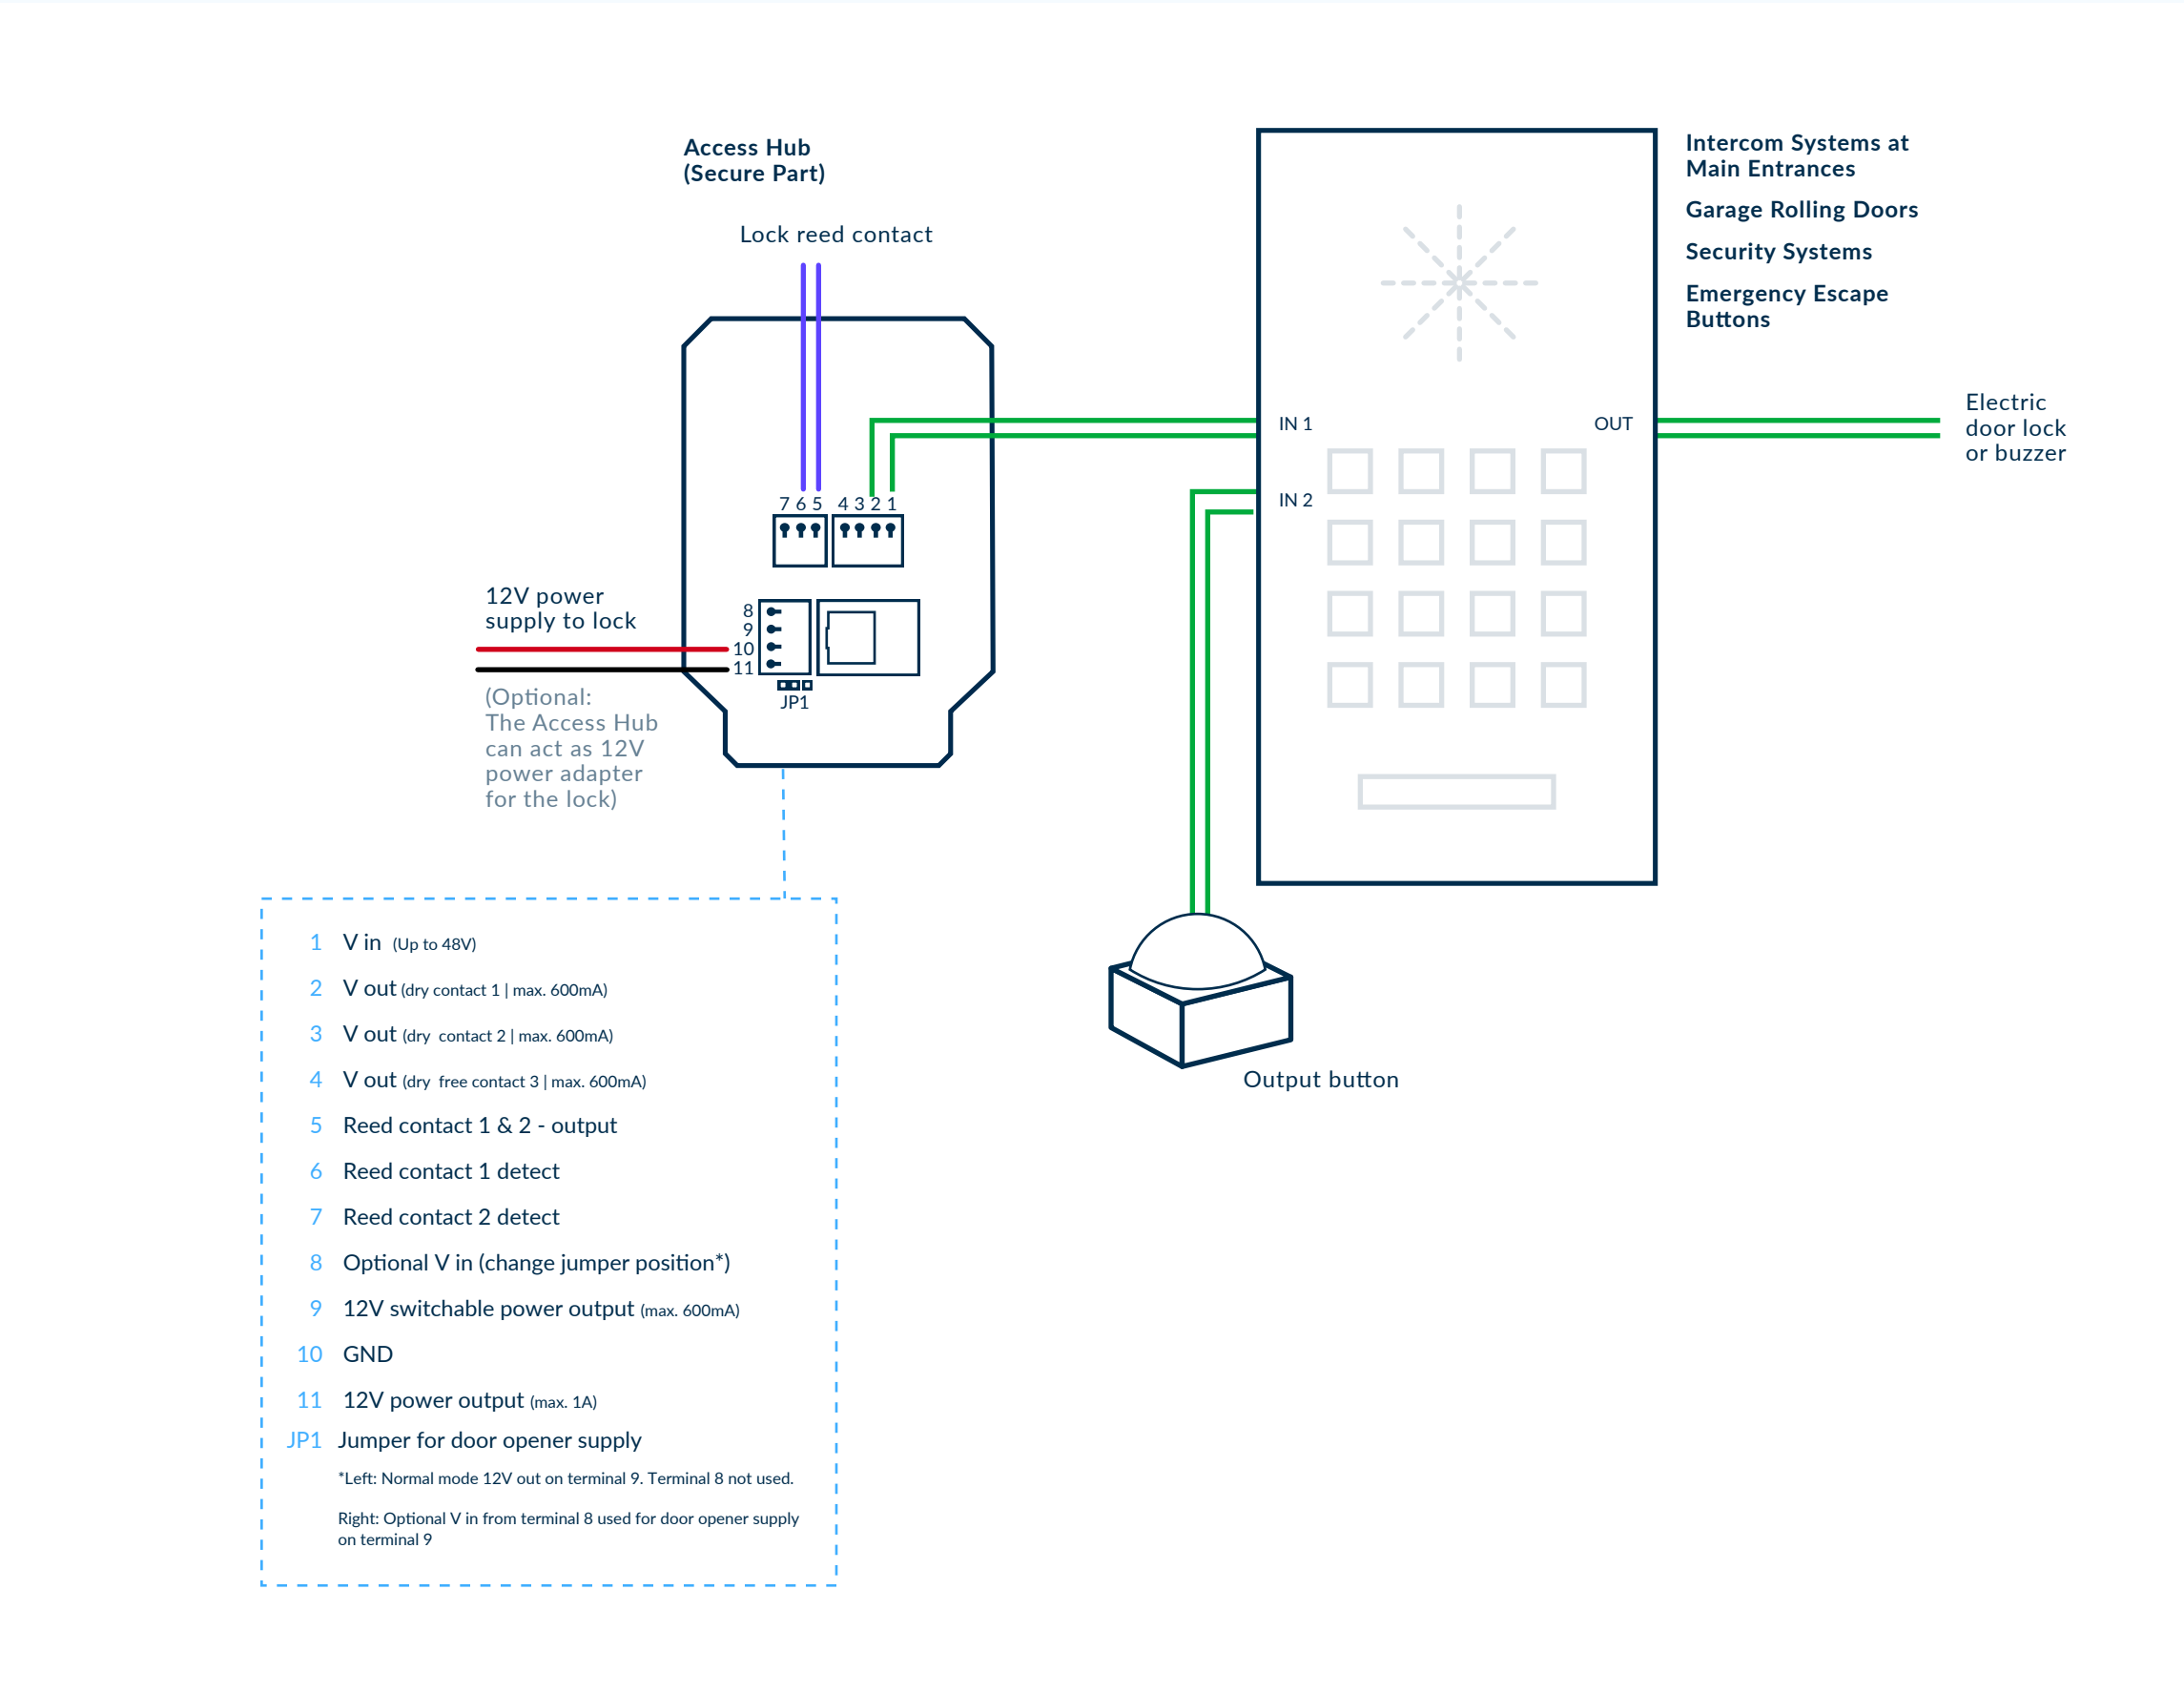


# ACCESS HUB SCHEMA

How to cable the Access Hub when it not directly controlling the lock. Check out the Access Hub installation guide [here](#).

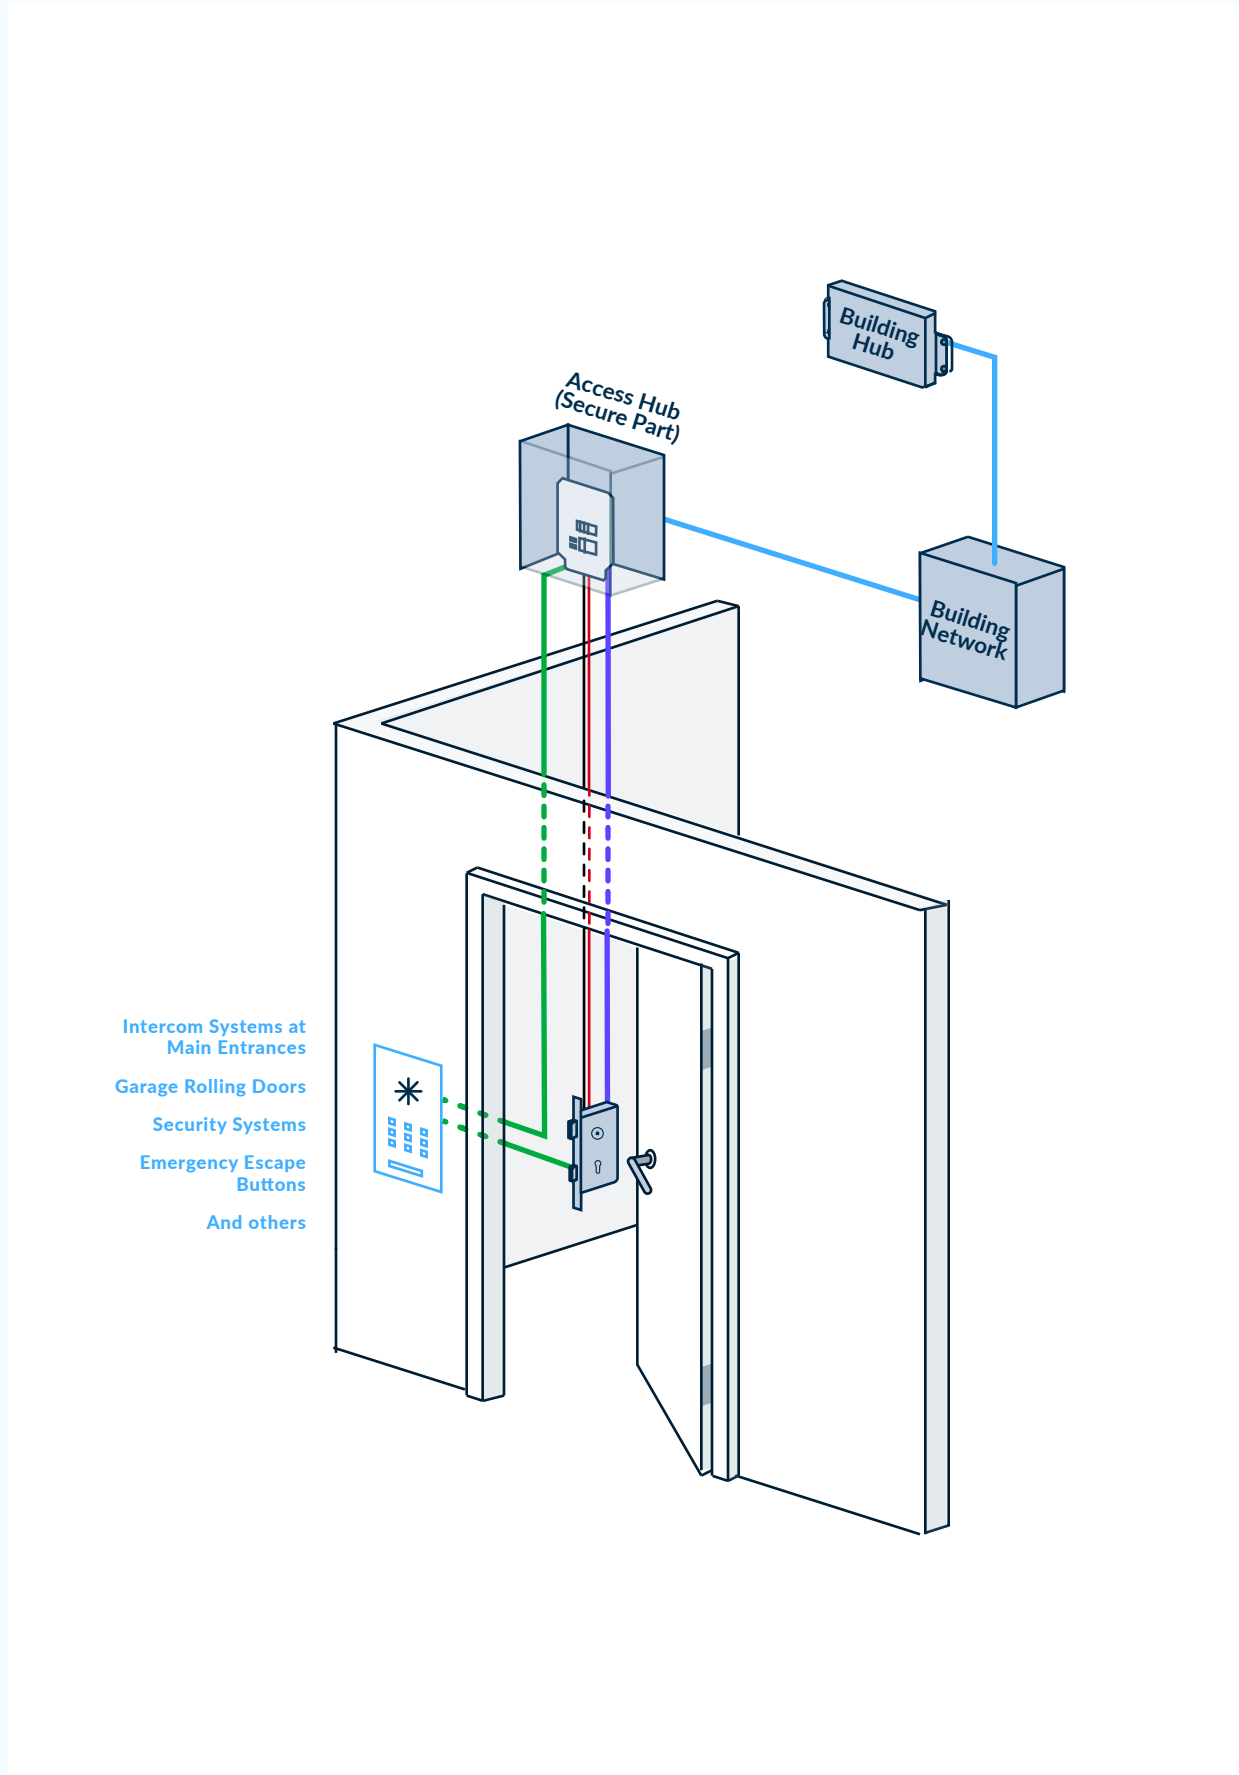

— Connection cable - 3 or 5m     
 — PoE     
 = Power cable 2 phases     
 — Reed contact     
 — Unlock command - dry contact or 12V opening

For further questions, contact [support@sensorberg.com](mailto:support@sensorberg.com) or call +49 30 62 20 80 75